





ProTimer/ProTimer Plus+ Installation and Operation Instructions

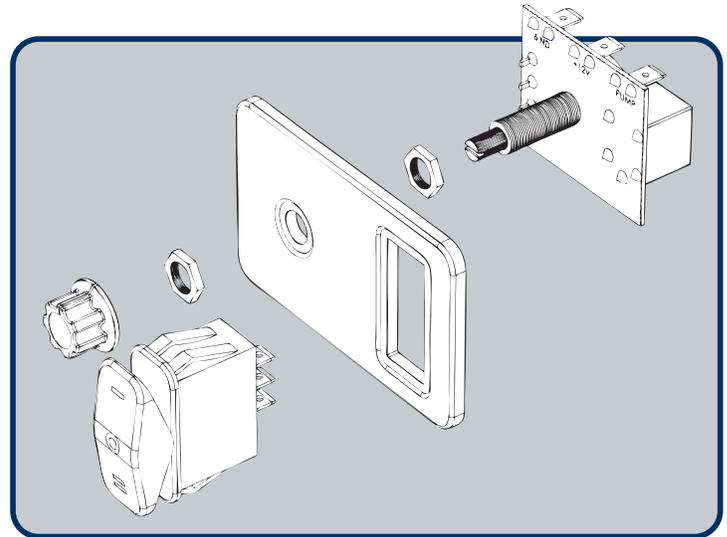


The Flow-Rite ProTimers are offered in two versions. The base ProTimer™ would be used with an existing switch in your boat and the ProTimer Plus+™ includes the 3-position master switch as an integral part of the panel.

Installation


When finding a location to install the ProTimer, keep in mind that it is weather resistant for the marine environment, but not submersible. The maximum thickness of the mounting surface is 3/4" (19 mm).

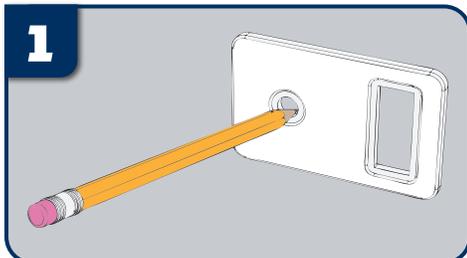


Do not remove the protective covering from the adhesive back at this time. Use the actual panel as a template to locate and mark the rotary timer switch and (for the ProTimer Plus+) the master switch mounting hole.

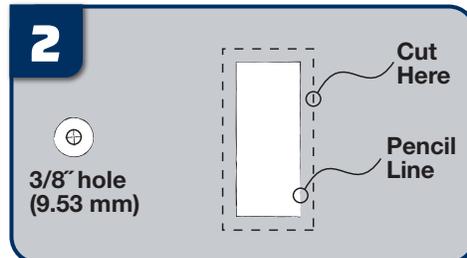

Drill a 3/8" (9.53 mm) hole for the timer. If installing the ProTimer Plus+, cut the switch hole 1/8" (3.18 mm) larger than the scribed line for clearance for the snap-in master switch mounting tabs.

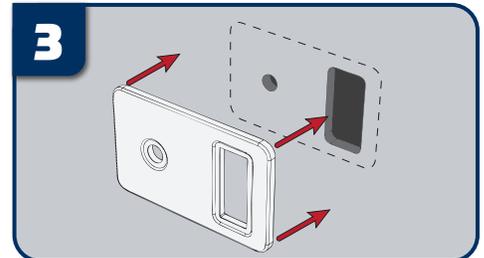


Once the holes are marked, drilled and cut, remove the adhesive backing cover sheet from the ProTimer panel and carefully align and adhere the panel in place using firm pressure.

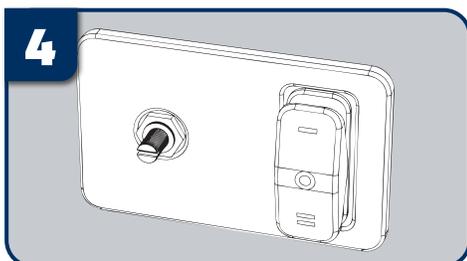

Install the timer switch from the back side and secure with the hex nuts. Snap in the master switch when using the ProTimer Plus+ as shown.



Turn the rotary knob stem all the way to the left (counter-clockwise) until it stops. Place the knob onto the stem with the white indicator pointing to MIN. Tighten the set screw.

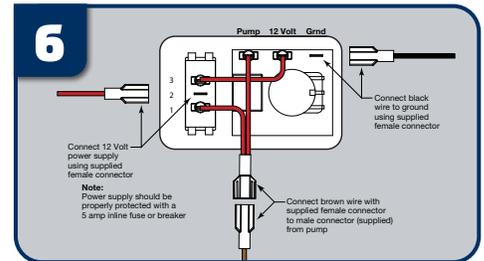


Attach wires as shown in the wiring diagram on the next page.

Made in the USA



Wiring Diagram for the ProTimer Plus+

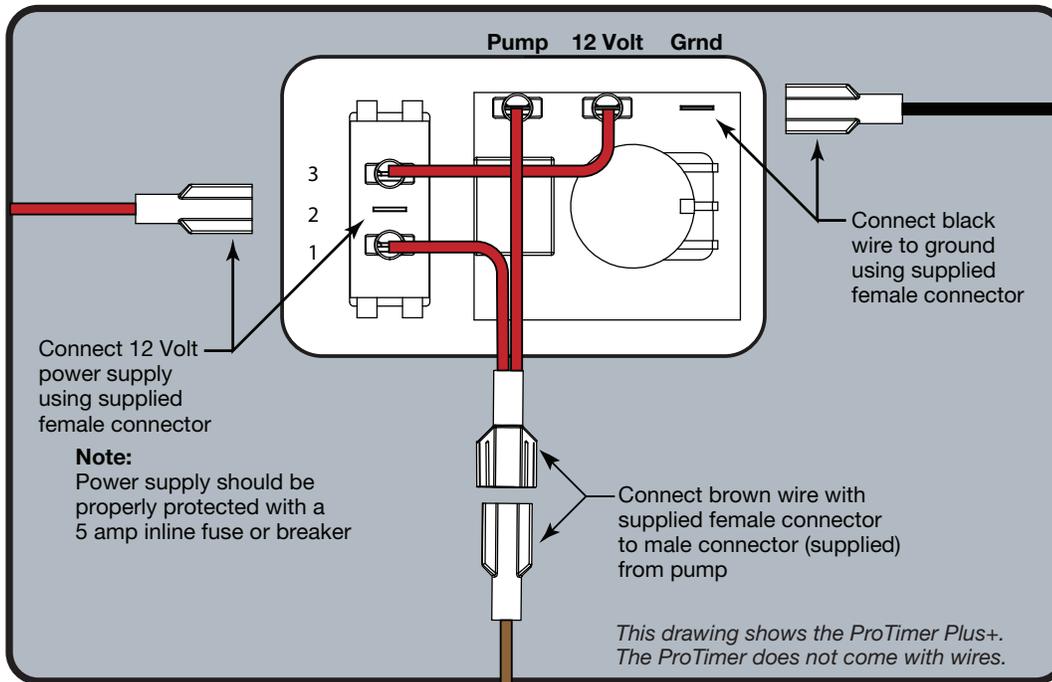


Using the TIMED DELAY Switch

To use the TIMED DELAY switch, place the 3-position master switch in the TIMER mode. The MIN and MAX settings refer to the amount of off time between run cycles of approximately 1 minute. MIN will allow the pump to run more often and MAX will allow the pump to run less often. The settings will allow you to set the intervals from approximately 1 to 12 minutes.

Avoid using the red areas of the TIMED DELAY switch unless you are in cold water and have a large livewell with just one or two fish. As you add fish or in warmer water, shorten the time between cycles by rotating the TIMED DELAY switch towards the MIN setting. If water temperatures are above 75° F, place the master switch in the constant ON position.

ProTimer Dial

Use the ProTimer TIMED DELAY feature when the master switch is set to the TIMER position. The TIMED DELAY mode will allow the pump to run for one minute then off for 1-12 minutes depending on where the dial is set. MIN and MAX refer to the amount of time the pump is off between cycles. MIN will turn the pump off for approximately 1 minute, while MAX will turn the pump off for approximately 12 minutes.

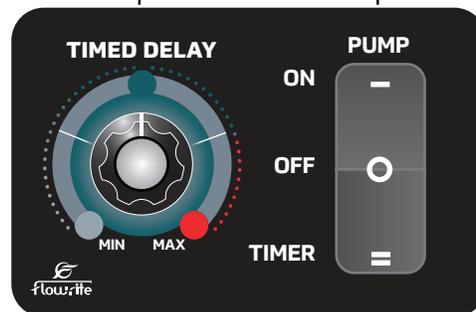

Master Switch

ON - In this position, the pump will run constantly which is ideal for water temperatures above 75° F. In this mode, the TIMED DELAY feature is inoperable.

OFF - Switch position to keep the pump off when no water or fish are in the livewell.

TIMER - Set the switch in this position to activate and use the TIMED DELAY feature.