
Bow Mount
Installation Guide

Secure. Stable. Built for Shallow Water.

This guide walks you through installing your Stayput Anchor Bow Mount.
Follow the steps below for a secure and reliable installation.

RECOMMENDED MOUNTING LOCATION

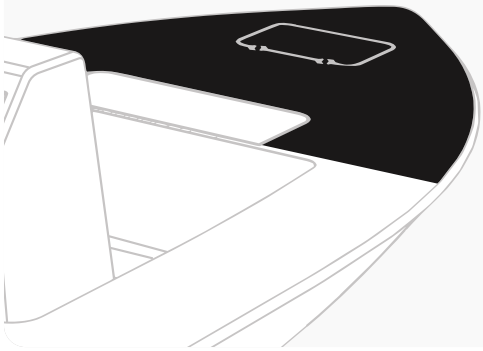

REQUIRED TOOLS

- Drill
- 1/4” Drill Bit
- Marker or Pencil
- 11 mm Wrench or Socket
- Safety Glasses (Recommended)

BEFORE DRILLING

INSPECT THE AREA BENEATH THE MOUNTING SURFACE AND VERIFY THERE ARE NO:

- Wiring
- Fuel Lines
- Steering Components
- Hoses
- Other Obstructions

1 CHOOSE THE MOUNTING LOCATION

Select a flat, structurally sound area at the bow with adequate clearance beneath the deck.

2 INSPECT BELOW THE MOUNTING AREA

Verify there are no wires, fuel lines, hoses, steering components, or other obstructions.

3 POSITION THE BOW MOUNT

Check deployment angle and ensure clearance from trolling motors, rub rails, and other hardware.

4 MARK THE DRILL HOLES

Use the bow mount as a template. Mark each mounting hole clearly and double-check alignment before drilling.

5 DRILL PILOT HOLES

Start with small pilot holes to confirm placement is accurate. Then enlarge the holes using a 1/4" drill bit.

6 DRY FIT THE MOUNT

Place the mount over the drilled holes and insert hardware to ensure everything lines up properly before final installation.

7 INSTALL THE BOW MOUNT

Insert mounting hardware and tighten evenly using an 11 mm wrench or socket.

8 DO NOT OVERTIGHTEN

Tighten securely, but avoid overtightening to prevent damage to fiberglass, aluminum, or the mounting surface.

9 FINAL INSPECTION

Confirm the mount is stable and does not shift. Ensure the pole spike inserts and removes smoothly.

10 ON-THE-WATER TESTING

Test in calm, shallow water before normal use.

HARDWARE SPECIFICATIONS

DRILL BIT SIZE
1/4” (6.35 mm)

THROUGH-BOLT NUT SIZE
11 mm

IMPORTANT NOTES
Always verify installation before use. Stayput Anchor systems are designed for shallow water use. Use caution in changing conditions.